



UK - OSET Bikes Ltd
3-5 Horndean Road
Bracknell
Berkshire RG12 0XQ
UK
Tel. 07913 576425
<http://www.osetuk.com>
info@osetuk.com

AUSTRALIA
OSET Bikes Australia Pty Ltd
PO Box 3223
South Brisbane
Queensland 4153
Australia.
Tel. (07) 3846 3339
Mobile. 0403 260 779
<http://www.osetbikes.com.au>
service@osetbikes.com.au

NEW ZEALAND
BondNZ Ltd
PO Box 14830
Panmure
Auckland
New Zealand
Tel. 09 5804100
Fax 09 5804 101
<http://www.oset.co.nz>

SOUTH AFRICA
OSETBikes (SA)
Midas MiniMoto
14 Midas Avenue
Olympus
Pretoria 0043
South Africa
Tel/Fax 27 12 9915686
Mobile. 27 82 4530895
dcil@mweb.co.za

USA - OSET CORP
146 W. Irvington Place,
Denver, CO 80223. USA.
303 990-2390.
<http://www.OSETBIKES.com>
info@OSETBIKES.com



OWNERS MANUAL

OSET SPIDER 12.5
OSET SPIDER 16.0



OSET CORP
146 W. Irvington Place,
Denver, CO 80223. USA.
303 990-2390.
<http://www.OSETBIKES.com>
info@OSETBIKES.com

(See distributor details on the back cover)

**INTRODUCTION:
A WORD ABOUT THIS OWNER'S MANUAL AND SAFETY:**

Firstly, thank you for purchasing an OSET Electric Mini Trials Bike. This is a serious piece of machinery designed for use by children in fully controlled and safe environments. As the purchaser/owner of the machine, YOU are the responsible adult with the task of keeping the rider(s) safe at all times. If you defer this task to another adult, it is YOUR RESPONSIBILITY to pass this owners manual and all relevant information to whoever will take on this role, and ensure without question that the rider is controlled and taught in a safe manner.

Your OSET is very adjustable and can be specifically set up for the rider. Please do not allow the machine to be used or adjusted by other children or adults. There are likely to be many children asking for a ride. DO NOT ALLOW THIS TO HAPPEN. It is likely you know the abilities, levels of concentration and attention span of the child you purchased the machine for. EVERY CHILD IS DIFFERENT and it is impossible for you to properly supervise other children.

Your OSET is driven by a powerful electric motor. The speed dial MUST be adjusted to suit the abilities of the rider. Please remember that even when the speed is set to a slow setting, the torque on these motors is virtually instant. This means that opening the throttle will propel the machine to the set speed virtually instantly. For developing good riding skills this is a wonderful feature, as it will teach the rider throttle control at a very early age. If the speed is set too high, then the rider will accelerate very quickly to a speed they are not comfortable with. In a 'panic' situation, riders tend to open the throttle more. This could result in a crash, serious injury or death, as well as damage to the machine. Your OSET has great capabilities, and can grow with the skills of the rider to very high levels, but it is IMPERITIVE that the responsible adult controls the entire learning process and gives full attention at all times. **IT IS YOUR RESPONSIBILITY TO FORESEE ALL POTENTIAL SITUATIONS AND CONTROL THE RIDING ENVIRONMENT ACCORDINGLY.** This means not just the machine and the rider, but also the riding terrain and environment.

Our machines are virtually silent, and can be used in many places that gasoline bikes can not. They are brilliant for practicing in back yards, front yards, garages, and even inside houses!

OSET Mini Bikes are designed for **off road use only** and must not be used on public roads or sidewalks. **Please check and obey all local laws.** OSET's may only be ridden in safe areas where all laws are being followed and all required permissions are given.

OSET's are amazingly capable, and can be used from the earliest stages of learning to ride all the way through to National Children's Motorcycle Trials Competitions. The secret of learning to ride well is being able to ride a lot. OSET's enable this to happen, and can make the learning process very gratifying for both the children and the adults. Thanks again for purchasing an OSET, and we hope you, and your child, will enjoy the ride!

Ian Smith. President, OSET CORP.

LIMITED WARRANTY:

OSET Electric Dirt Bikes are warranted to the original retail purchaser to be free from defects in materials and workmanship in the frame and components except for batteries, tires, and inner tubes for a period of thirty (30) days from the date of purchase. Batteries are warranted to the original retail purchaser to be free from defects in materials and workmanship for a period of thirty (20) days from the date of purchase. Tires and tubes are warranted to be free of manufacturing and material defects for thirty (30) days. Such tire and tube warranty shall not include flat tires, tire cuts, skid through, over inflation blowouts, or other such misuse or normal hazards. Warranties are limited to repair and/or replacement of bike and/or parts found by OSET to be defective, at the sole discretion of OSET.

OSET Limited Warranties do not cover or apply to the following: Normal wear and tear; any damage, failure and/or loss caused by accident, shipping, misuse, neglect, abuse and/or failure to follow instructions or warnings as stated in the applicable owner's manual or other printed materials provided with the product; damage, failure and/or loss caused by the use of the product for stunt riding, ramp jumping, speed competition, inappropriate off-road use, acrobatics, trick riding or other similar activities, or in any other manner for which such products were not specifically designed. This warranty does not apply to any products or components, mechanical and/or electrical, which have in any way been altered from their original configuration by any person. OSET will not be liable and/or responsible for any damage, failure or loss caused by any unauthorized service or use of unauthorized parts. The OSET Limited Warranty does not cover or apply to any OSET product used for rental or commercial purposes unless the specific product is designated, labeled, or marketed by OSET as acceptable for rental or commercial use. All warranty claims must be made directly to selling retailer. The selling retailer is the primary provider of warranty support and customer service. OSET may choose to perform warranty service at the sole choice of OSET. The original owner of the product must provide proof of purchase prior to approval of any warranty claim. Under no circumstances does this limited warranty include any costs associated with shipment and/or transportation to or from retailer or OSET. OSET, at its sole discretion, has the option of replacing with a new part, a factory recertified part, or repairing any defective product and/or component thereof, or to pay to the owner of such product an amount equal to the original purchase price of such product. The original owner shall pay for all costs of labor associated with any warranty claims. This warranty supersedes all previous warranties. The warranties stated herein are in lieu of and expressly excludes all other warranties not expressly set forth herein, whether express or implied by law or otherwise, including, but not limited to, any warranties for merchantability and/or fitness for any particular purpose. OSET shall in no event be liable or responsible for incidental or consequential losses, damages or expenses in connection with their electric dirt bike products. The liability of OSET hereunder is expressly limited to the replacement of goods complying with this warranty or at the sole election of OSET to the repayment of an amount equivalent to the purchase price of the product in question. CAUTION: Some states may not permit the exclusion or limitation of consequential damages and therefore, such limitations may not apply to the consumer in which such impermissible exclusions are involved.

Contact information on the back cover.



This manual should be enough to get you started. Further techniques can not be covered in this manual. When learning any technique the most important thing is to do so slowly and safely. Remember that OSET bikes are a Trials bike design, and therefore designed and developed for slow speed riding.

Enjoy the ride!

WARNING!

BE SAFE!

Never use OSET bikes in unsafe situations! Follow all instructions. Follow all laws.

VISIT THE OSET WEB SITE FOR YOUR COUNTRY (LISTED ON THE BACK COVER) TO:

- BUY SPARE PARTS AND ACCESSORIES.
- READ ARTICLES ON ADVANCED MACHINE SET-UP AND TECHNIQUES.

PLEASE READ THIS OWNER'S MANUAL PRIOR TO OPERATION!

To ensure optimum performance from your new OSET, and to ensure safe operation, it is important to fully understand the features of the machine. This manual contains **IMPORTANT INFORMATION** that every owner must fully understand.

PARENTS/GUARDIANS

If a child will operate your OSET, it is **YOUR RESPONSIBILITY** to set up the machine, and make sure it is operated correctly and safely. Your OSET features a speed limitation dial that must be set for the abilities of the rider. This dial is positioned so a tool must be used to change the speed setting. This must be set by the responsible supervising adult. Never allow the child to alter the setting, or to ride without suitable supervision. Instructing and practicing in a controlled situation will allow the child to learn how to operate the machine safely, and under control. The child's enjoyment will be greatly enhanced if they feel safe during the initial learning process. Please follow the instructions contained in this manual before operating the machine.

SERVICE/WARRANTY

For all questions regarding your OSET Mini Bike, please contact your local retailer/distributor.

See distributor contact information on the back cover of this manual.

OFF ROAD USE ONLY!

OSET Mini Bikes are designed for off road use only and must not be used on public roads or sidewalks. Please check and obey all local laws.

This Owner's Manual uses the following symbols and terms to call your attention to Warnings, Cautions and Notes:

Term:

WARNING

Meaning: This term calls attention to a Warning. A Warning indicates a potentially hazardous situation which, if not avoided, could result in bodily injury or death, in addition to property damage. Read the text accompanying the warning to be aware of the specific hazard.

Term:

CAUTION

Meaning: This term calls attention to a Caution. A Caution indicates a potentially hazardous situation which, if not avoided, may result in damage to equipment or inadvertent system failure. Read the text accompanying the Caution to be aware of the specific hazard and avoid damage or system failure.

Term:

NOTE:

Meaning: This term calls attention to a Note. The text accompanying a Note provides helpful or other important related information.

Please read, understand and follow all Warning, Caution and Note notices on your OSET electric bike and those included in this Manual. If you do not understand any of this important information, please contact your selling dealer/distributor or the OSET Customer Service Department listed on the back cover of this manual.

4. LEARNING SOME TECHNIQUE:

Learning some correct 'Trials' style techniques will put the rider in a great position for all forms of riding that come later. The Trials rider learns how to control the machine at slow speeds, and use correct skills to execute tight turns and other techniques. Many riders tend to think that the way to turn is to simply turn the handlebars. This is natural, but wrong! If tight turns are mastered correctly, many other skills will follow on naturally.

1. Riding in a straight line, the rider can practice leaning the bike to one side, then to the other. They will notice that when they do this, the bike will want to turn.
2. To execute a tight turn, lean the bike to the inside.
3. Weight should be on the 'outside' peg, and the outside knee should be out.
4. The foot on the outside pig can pivot out as well.
5. The inside arm can be almost straight, the outside arm bent, and the shoulders square on to the angle of the bars.

Turning is the most important technique of all. Once this is mastered, many other techniques will follow. Turning with this level of skill requires full control over the machine. It will not be possible without the rider understanding all the intricacies of balance, body position, and throttle control.



NOTE!

A surprising amount of technique can be completely natural for children. In many cases, the riders simply work out what works best, and go with it. Simple instructions like "lean it in" will often initiate everything else being done correctly. The more exaggerated this technique, the better it will work. The aim is to master 'full-lock' turns. If a child can master this, they are likely to become great riders. Very few adults can do this! Viewing Trials DVD's (www.TrialsTV.com) may also help. Children can learn simply by watching.

3. LEARNING TO STAND UP:

Once the basics are mastered, the speed dial can be turned up, bit by bit, to match the growing skills of the rider. Before the rider gets going too quick it's a good idea to get them riding the bike 'correctly'. This means, standing up and in control. Learning to stand up is very difficult if the skill set of the rider does not include good throttle control. If the speed setting is low, the rider must rotate their wrist 'around' the throttle so that when they stand, the wrist is in the correct position. As speed dial settings get higher, the 'dead-zone' in the throttle diminishes, so it becomes easier to stand up and work the throttle.

1. While the machine is stationary and the rider is on the bike, have an adult stand behind and support the rider at their waist.
2. The rider must position themselves correctly, standing in a very neutral position, holding the bars in such a way that their weight is not being supported by their hands.
3. If the speed dial is turned so the speed is quite low, have the rider rotate his/her hand around the throttle enough that when the throttle is twisted, the wrist will be back in the correct position.
4. When the rider is ready, they can open the throttle, smoothly and in control. An adult should run along and help support when necessary.
5. Once up and running in the standing position, it's time to learn some technique.

NOTE!

A common error (in our view) is to put children on machines that are too big. Please note how large multi-time World Champion Dougie Lampkin and multi-time US Champ Geoff Aaron are on their bikes. A bike that seems too small when the rider sits can be just right when they stand in the correct position. OSET bikes are designed to be ridden standing up. If the machine is too large for the child, they will have no leverage on the bike, and be unable to develop techniques. To develop correct technique, the rider is better off being too big than too small.



WARNING: OFFROAD USE ONLY.

It is illegal and hazardous to use this vehicle on streets and thoroughfares. Use on streets exposes the rider to hazards from motorists and other vehicles. Use on streets can lead to accidents resulting in death or serious injury, and property damage. Check local laws and regulations to find out where and how you may use this product legally.

WARNING: ADULT SUPERVISION REQUIRED.

This vehicle must be used in the presence of adult supervision to insure that safe riding practices are established and followed. Even though a child is of the recommended age to use this vehicle, not all children have the strength, skills or judgment needed to operate this vehicle safely. A parent should supervise their child's operation of this vehicle at all times. Parents should permit continued use of this vehicle only if they determine that their child has the ability and judgment to operate the vehicle safely.

WARNING: FOLLOW SAFE RIDING PRACTICES.

- OPERATOR ONLY! NO PASSENGERS!
- Long hair, loose clothing or items worn by the rider must be covered to prevent entanglement in moving parts of the vehicle or surroundings while riding.
- Do not exceed the weight limit. Heavier riders may significantly reduce performance and/or render the vehicle unstable and/or over-tax the brakes and other control devices. Heavier riders may cause structural damage not covered by the warranty.
- Do not touch any moving or hot parts.
- Do not ride at night or under other low visibility conditions.
- Do not immerse this vehicle in water.
- Do not ride on steep or uneven surfaces. Steep or uneven surfaces greatly increase the likelihood of loss-of-control and a fall.
- Do not ride faster than conditions permit for safe operation. Excess speed greatly increases the likelihood of loss-of-control and a fall.
- The rider should be securely seated on the vehicle ready to ride with the kickstand up before turning on the vehicle.

WARNING: WEAR PROTECTIVE EQUIPMENT, ESPECIALLY A HELMET AND EYE PROTECTION.

A high quality helmet approved by your county's governing body is the single most effective way to reduce the severity of an injury in the event of an accident. ALWAYS use an approved helmet when riding this vehicle. As this vehicle is intended for OFF-ROAD use, there is a very high likelihood that dirt and other debris will be thrown into the air, presenting the risk of eye injury if protective eyewear is not used. OFF-ROAD riding presents many hazards such as loose dirt and gravel, obstacles and other difficult-to-see-and-avoid conditions. The possibility of a fall is high. Wear wrist, knee and elbow protection. Motorcycle leathers can prevent abrasion injuries in the event of a fall. Failure to use appropriate safety equipment greatly increases the likelihood of death or serious injury in the event of an accident.

WARNING: PROPER MAINTENANCE OF THIS VEHICLE IS REQUIRED.

Failure to maintain this vehicle in proper operating condition can lead to an accident resulting in death or serious injury, and property damage. If you have any questions about the proper care and maintenance of this vehicle, consult your selling dealer/distributor or call OSET Customer Service on the number listed on the back cover of this manual. Before each ride, make sure that all bolts and nuts are fastened securely and that the tires are properly inflated. Before each ride, check that the throttle and brake controls are operating freely. Adjust and lubricate the drive chain as necessary. See pages 14-25 of this manual for additional details regarding service, repair and maintenance. This vehicle should be returned for periodic maintenance to your selling dealer AT LEAST once per year, but more frequently if used under severe conditions.

2. FIRST RIDE:

After the rider understands the controls and is comfortable with them, it's time for the first ride. For this, the rider must be dressed correctly in suitable safety gear. Boots, gloves, a helmet and eye protection are necessary. The venue must be flat, open and safe, with no obstacles of any kind. The machine must be set up correctly, with the speed dial set to walking pace or lower.

1. Ensure the power is turned off.
2. While an adult supports the bike, and while the side-stand is down, the rider can get on the bike.
3. The rider now can reach back with their left foot, and put the side-stand to the up position. Have an adult ready to hold the bike up for this!
4. Encourage the rider to rock the machine from side to side, and forward and back, in order to get comfortable.
5. The rider can now switch the machine on, by turning the key with his/her right hand.
6. Before turning the throttle, the pegs can be in the up position, and the riders legs splayed forward and out like outriggers.
7. The rider can now twist the throttle and go. Encourage them to go and stop, go and stop... using the brakes to stop. Always have a supportive hand on the rear fender.
8. Once comfortable, the pegs can be put in the down position, and the rider can try to ride along, and lift their feet onto the pegs as they go.
9. When stopped, turn the power off.

WARNING!

OFF ROAD USE ONLY!

OSET Mini Bikes are designed for off road use only and must not be used on public roads or sidewalks. Please check and obey all local laws.

RIDING INSTRUCTIONS & SAFETY TIPS (BEGINNERS AND LEARNERS):

With the bike set up correctly, your OSET is ready to ride! For learning riders, please use these tips and instructions. The riders will get the most enjoyment if they feel safe and in control. Do not be tempted to start the riders too quickly. Make sure the speed is slow to begin. For first time riders, this should be walking pace.

1. STATIONARY LEARNING:

1. Ensure the key switch is in the off position.
 2. Lift the machine on to a stand or block so the back wheel is an inch or two off the ground.
 3. Sit the rider on the machine.
 4. Explain all the controls:
 - a. Throttle
 - b. Front Brake (right hand side).
 - c. Back Brake (left hand side).
- Have the rider practice each control, while the power is still off.
5. Explain that it's time to try some stationary practice, with the power turned on. Place the rider's feet either on the pegs, or on the ground. Either way, make sure the rider is wearing boots with no laces, and no loose clothing.
 6. Start with both hands on the handlebars. Instruct the rider to reach down and back with his/her right hand and turn the key to the on position. This must always be done with the right hand.
 7. With the power on, and the riders hands back on the bars, have the rider practice opening and closing the throttle. The aim is to get some throttle control, and not use it as an 'on-off' switch.
 8. While still practicing the throttle, practice using the rear brake to stop the back wheel. Make sure that this is coordinated. The throttle and brake should not be applied simultaneously. **UNTIL THESE SKILLS ARE MASTERED, DO NOT LET THE CHILD RIDE THE BIKE!**

WARNING!

There must NEVER be a hand on the throttle when the power is switched on. If power was switched on with the throttle open, the bike will immediately and suddenly accelerate, creating a dangerous situation that could result in serious injury or death, and damage to the machine.

NOTE!

If the rider does not fully understand the controls, and demonstrate these skills, do not let them ride. They can try again at a later date when they are ready. The riders must learn at THEIR pace

WARNINGS!

Failure to obey all of the warnings & instructions contained in this manual may result in serious injury or death and permanent damage to your OSET.

Safety Responsibilities

It's up to you. We've done everything we can to supply you with a safe and reliable product. Please read, understand and practice the following guidelines for safe operation of your OSET electric Trials Bike:

- **Always follow the Pre-Ride Checklist on page 26 before every ride.**
- **Do not operate your OSET if any damage is apparent. Immediately contact your local retailer/distributor or OSET Customer Service.**
- **Supervision:** Riders must be supervised by responsible adults **at all times**. The rider should never be beyond eye and voice range. An adult must ALWAYS assess and approve the riding conditions and the bike preparedness before the bike is ridden. Always ensure the rider is cautious, maintaining complete control and a reasonable speed. Ensure the terrain is suited to the skills of the rider.
- **Helmets & Safety Attire:** There is no single factor that works better at reducing the severity of injuries sustained in accidents more than a quality helmet. Please don't ever allow your OSET to be ridden without one. Riders should also wear suitable riding gear, eye protection and boots. Boots should NOT HAVE LACES. Shoe laces and loose clothing, or even long hair could potentially get caught in wheels, chains, or sprockets.
- **One Rider Only:** Your bike was engineered to carry one rider and no (0) passengers. Carrying a passenger would overload the machine and alter the handling. Do not allow this to happen.
- **Do not overload the bike:** OSET's are designed for small, lightweight riders. Exceeding the weight limitations will adversely affect the handling of the machine, and potentially cause damage.
- **It's the law; obey it:** Obey all laws. OSET's are for OFF-ROAD USE ONLY. OSET bikes can not be used on public roads or sidewalks. The purchaser, owner, and/or riders of this machine are directly responsible to know and obey all local, state, and federal laws regarding the riding and use of this machine.
- **Weather & Riding Conditions:** Bike brakes don't work well when they're wet. Don't ride in the rain or snow. Please be aware that distance to stop may double or triple over the distance that it takes under dry conditions. Ride more slowly, and anticipate your stops by applying the brakes MUCH earlier. Don't allow children to ride on slopes that are too steep for their ability.
- **Night time:** Don't ride after dark or in low light conditions.
- **Maintenance:** It worked fine when we put it in the box: Please maintain your bike. There are instructions here in this manual. We haven't figured out how to make a bike that takes care of itself. Check the brakes and the tires and the tightness of all those important fasteners before each and every ride. Pretend that you're a pilot doing a walk-around of his airplane before taking-off. The pilot knows that his life depends on the airworthiness of his airplane; the rider's life

depends on the preparedness of your bike. Please have your bike checked by a qualified mechanic AT LEAST once a year. It's a small investment in the well-being of the rider.

• **Batteries:** We have equipped your OSET electric bike with sealed lead acid batteries. We have devoted an entire chapter of this manual to the batteries. Please read and understand this important information. As always, if you have any questions, please don't hesitate to contact us.

- **Read this manual cover to cover:** There is a lot of important information that you need to know. Do not guess how to adjust the machine, charge it or ride it. We have recommendations that will instruct how to set –up, maintain, and ride your OSET. Please read them thoroughly.

- **Call us with questions or problems:** We can be reached at the numbers listed on the back cover of this manual. You can also get assistance from the OSET dealers.

IN SUMMARY:

1. **SUPERVISION. A responsible adult must supervise at all times.**
2. **WEAR A HELMET & SAFETY GEAR. The rider must wear a helmet & appropriate safety gear EVERY TIME.**
3. **NO PASSENGERS.**
4. **DO NOT EXCEED THE WEIGHT LIMITATIONS OF THE MACHINE.**
5. **OBEY ALL LAWS**
6. **RIDING CONDITIONS. Braking and traction are significantly reduced in wet or slippery conditions. Terrain varies, so be responsible!**
7. **DO NOT RIDE in low light conditions.**
8. **PLEASE MAINTAIN YOUR BIKE.**
9. **CARE FOR YOUR BATTERIES.**
10. **READ, STUDY AND UNDERSTAND THIS ENTIRE MANUAL.**
11. **If you don't understand any aspect of the use and care of your bike, PLEASE call OSET Customer Service.**

WARNING!

OSET Mini Bikes are designed to operate at 24 volts only. Use of any battery voltage higher than 24 volts will result in motor failure. OSET CORP considers such modifications and/or changes to its products to be a material alteration of any such products, thereby voiding any warranties and/or guarantees in their entirety and will not be responsible for any and/or all injuries, death and/or other damage(s) caused by any such modifications.

SETTING UP YOUR OSET FOR RIDING:

1. Set the speed dial to the correct level for the rider.
 - a. Ensure everyone is clear of the bike.
 - b. Place the bike on a stand or block, so both wheels are above the ground.
 - c. Turn the power key to the on position.
 - d. Insert a screwdriver through the speed dial hole, making sure it is seated correctly.
 - e. With your left hand on the screwdriver, clear of the wheel and tire, turn the throttle with your right hand to it's fully open position.
 - f. Turn the speed dial until the top speed is set correctly.
 - g. Remove the screwdriver.
 - h. Turn off the power and remove the key.
2. Check the tires are inflated to between 30 and 40 psi.
3. Check the chain for tightness and lubrication.
4. Set the controls correctly for the rider.
 - a. With the wheels on the ground, sit the rider on the bike.
 - b. Adjust the lever positions so they are easy to reach, and check that the brakes are functioning correctly, and at the desired level. The brakes can be 'backed-off' or tightened according to the abilities of the rider.

WARNING!

Improper set-up is dangerous! It is your responsibility to set the machine to the ability of the rider. Failure to do so could result in serious injury or death, and damage to the machine.

NOTE!

As the responsible adult, you must ensure that the OSET and its rider are ready to ride, every time. The bike must be set to the abilities of the rider, and you must ALWAYS supervise when, where and how the bike is ridden. Children can lose concentration quickly, and be distracted easily. If the speed is set too high or the brakes too severe then loss of control could result.

BE SAFE!

BATTERY REMOVAL AND INSTALLATION:

- Ensure power is turned off, and remove the key.
- Undo the Velcro tie straps on the sides and on the top flap.
- Carefully slide the battery connectors off, one at a time. Note the direction and position of the batteries, and the terminal for each wire. When it comes time to reconnect, each wire must be to the correct terminal.
- Push the remaining positive and negative wires to the back of the bike, so the battery bag can be carefully lifted off. Carefully lift off and remove the battery bag.
- Each battery can now be carefully removed.

To Re-Install the batteries and bag, reverse the above procedure.



LONG TERM STORAGE:

If you do not plan to use your OSET for an extended period of time (1 month or more), remove the batteries from the bike for storage.

- Fully charge the batteries for at least twelve hours before storing the batteries.
- Fully recharge the batteries for at least twelve hours at least every 60 days of storage.
- Store the batteries in a cool (50° to 70°F, 10° to 21°C), dry place. Avoid direct exposure from the sun.

If you have any questions about the batteries or their usage, please do not hesitate to contact the Customer Service Department.

BATTERY DISPOSAL:

We are confident that you will enjoy many miles of pleasurable riding with your OSET electric bike batteries. However, batteries do eventually wear out. When this happens, we urge you to properly dispose of your used batteries. For guidance regarding proper disposal of your batteries, please contact the Customer Service Department at OSET. Or, you can find very useful information regarding used battery drop-off sites from the Rechargeable Battery Recycling Corporation (RBRC) at www.rbrc.org.

INDEX

Introduction:	-	Page 2
Please Read!:	-	Page 3
Warnings, Cautions and Notes:	-	Page 4
Contents:	-	Page 9
Specifications – OSET Spider 12.5:	-	Page 10
Specifications – OSET Spider 16.0:	-	Page 11
Component Chart:	-	Page 12
Unpacking and Assembly:	-	Page 13
COMPONENT DETAILS:		
Switch Plate:	-	Page 14
Key Switch		
Speed Dial Potentiometer		
Charger Port		
Charge Indicator:	-	Page 15
Drive Train:	-	Page 16
Chain Adjustment		
Motor Performance:	-	Page 17
Suspension:	-	Page 17
Daily Maintenance and Cleaning:	-	Page 17
Cleaning:	-	Page 18
Front Wheel Removal/Installation:	-	Page 18
Rear Wheel Removal/Installation:	-	Page 19
Front Brake Adjustment – OSET 12.5:	-	Page 20
Front Brake Adjustment – OSET 16.0:	-	Page 20
Rear Brake Adjustment/Operation:	-	Page 21
Battery Use, Care and Maintenance:	-	Page 22
Charging Instructions:	-	Page 23
Important Notes about Charging	-	Page 23
Battery Removal and Installation	-	Page 24
Long Term Storage:	-	Page 25
Battery Disposal:	-	Page 25
Setting Up Your OSET for Riding:	-	Page 25
Riding Instructions and Safety Tips:	-	Page 26
1. Stationary Learning:	-	Page 26
2. First Ride:	-	Page 27
3. Learning to Stand Up:	-	Page 28
4. Learning Some Technique:	-	Page 29
Contact Us:	-	Page 30
Limited Warranty:	-	Page 31

SPECIFICATIONS – OSET SPIDER 12.5

Performance:

- Maximum Speed - 12-14mph
- Maximum Range - 8 miles
- Weight Limit (Rider) - 50 lbs



NOTE!

Many factors affect speed and range capabilities. Terrain, average speed, rider weight, tire pressures, wind, hills etc all have an impact.

Chasis:

- | | |
|----------------------|--------------------------------------|
| - Frame | - Steel |
| - Suspension (Front) | - Telescopic. |
| - Suspension (Rear) | - 100mm Spring. |
| - Wheels | - 12.5" Aluminum alloy. |
| - Tires | - 12.5" x 2.4" Pneumatic. Tube type. |
| - Brake (Front) | - V-Brake |
| - Brake (Rear) | - Band Brake, 80mm diameter. |
| - Foot pegs | - Forged Steel. |
| - Handlebars | - Steel. 520mm width. |

Motor:

- 500 watt brush type. 24 Volt.
- Gearing – 13T front sprocket, 90T rear. #25 chain.

Controller:

- 24 volt, 40 amp pulse width modulating, with inline relay and fuse.
- External 'speed dial' potentiometer speed control.

Throttle:

- Twist Type.

Batteries:

- 2 X 12 volt 8.5 amp hour sealed lead acid. 2 batteries in series.
- Dimensions - 151mm x 65mm x 94mm.
- Weight – 6.06 lbs per battery.

Keys, Dials and Ports:

- Key Switch.
- Speed Dial Potentiometer
- 24 Volt Charger Port.

Size:

- | | |
|------------------------------|----------|
| - Wheelbase | - 28" |
| - Seat Height | - 15" |
| - Ground Clearance | - 8" |
| - Handlebar Height | - 25" |
| - Weight (without batteries) | - 35 lbs |
| - Weight (with batteries) | - 47 lbs |

IMPORTANT NOTES ABOUT CHARGING THE BATTERIES:

- It normally takes four to six hours to fully charge your batteries from a fully discharged condition.
- Fully charge the batteries for at least twelve hours before using your OSET electric bike for the first time.
- Fully charge the batteries for at least twelve hours for the first three charges after using your OSET bike.
- Fully charge the batteries for at least twelve hours after every ten charges.
- Always connect the charger to the AC power source before connecting the charger to the bike.
- Always disconnect the charger from the bike before disconnecting the charger from the AC power source.
- To avoid damage to the charger, never subject it to intense physical shock or severe vibration.

WARNING!

Improper use of the battery charger can result in a fire with property damage and physical injury or death.

CAUTION!

Do not block the fan vent on the charger while charging the battery. This can cause the charger to overheat.

CAUTION!


The battery charger supplied with this battery is for INDOOR use only.

CAUTION!

Avoid any contact with water or other fluids while charging the battery. If the battery, charger or any connections become wet, immediately unplug the charger and thoroughly dry all components prior to charging the battery.

CHARGING INSTRUCTIONS:

- Ensure that the Power Switch on your OSET is switched OFF before connecting the charger to the charge port.
 - Carefully align the connector pins and connect the charger to the bike by plugging the connector into the charger receptacle.
 - Plug the charger into the wall outlet.
-
- LED Indications:
 - The LED will illuminate RED when the charger is plugged into a wall outlet.
 - The Indicator LED will illuminate RED while the charger is charging the battery.
 - The Indicator LED will change to GREEN when the battery is fully charged.
 - When charging is complete (the Indicator LED is GREEN), carefully unplug the charger from the wall socket, then from the bike by pulling the connector out of the charger receptacle.
 - Your OSET electric bike is now ready for use.

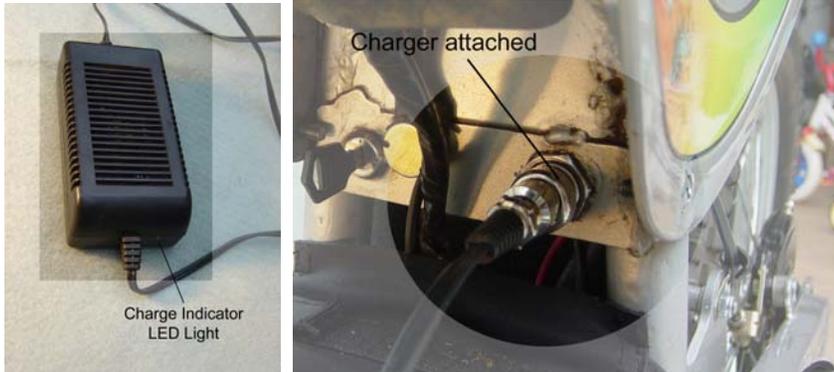

WARNING!

Use only the supplied battery charger. If you use any other battery charger, you will void the warranty, you may damage the batteries and you could cause a fire that would result in property damage and possible injury or death.

SPECIFICATIONS – OSET SPIDER 16.0

Performance:

- Maximum Speed - 15-17mph
- Maximum Range - 8 miles
- Weight Limit (Rider) - 85 lbs



NOTE!

Many factors affect speed and range capabilities. Terrain, average speed, rider weight, tire pressures, wind, hills etc all have an impact.

Chasis:

- Frame - Steel
- Suspension (Front) - Telescopic.
- Suspension (Rear) - 125mm Spring.
- Wheels - 16" Aluminum alloy.
- Tires - 16" x 2.4" Pneumatic. Tube type.
- Brake (Front) - Mechanical disc.
- Brake (Rear) - Band Brake, 100mm diameter.
- Foot pegs - Forged Steel.
- Handlebars - Steel. 560mm width.

Motor:

- 600 watt brush type. 24 Volt.
- Gearing – 11T front sprocket, 90T rear. #25 chain.

Controller:

- 24 volt, 40 amp pulse width modulating, with inline relay and fuse.
- External 'speed dial' potentiometer speed control.

Throttle:

- Twist Type.

Batteries:

- 2 X 12 volt 10 amp hour sealed lead acid. 2 batteries in series.
- Dimensions - 151mm x 65mm x 111mm.
- Weight – 7.05 lbs per battery.

Keys, Dials and Ports:

- Key Switch.
- Speed Dial Potentiometer
- 24 Volt Charger Port.

Size:

- Wheelbase - 35"
- Seat Height - 18.5"
- Ground Clearance - 8.75"
- Handlebar Height - 30"
- Weight (without batteries) - 43 lbs
- Weight (with batteries) - 57 lbs

COMPONENT CHART



The 'switch-plate' is located beneath the seat area, behind and above the batteries. As the rider sits, the key switch is on the right, the back side of the 'speed dial' potentiometer is in the middle, and the charge port on the left. Please note, the toggle switch in this picture has been replaced by a key switch on production models.



The chain guard is designed to protect people close to the OSET bike from injury.

NOTE!

Under no circumstances should any hands or other body parts be close to a moving chain. Riders should wear boots without laces, and not have any loose clothing that could be caught by the chain.



The Spider 16.0 features a front disc brake, as opposed to the 'V' Brake on the Spider 12.5.

BATTERY USE, CARE AND MAINTENANCE:

For the proper use, maintenance and storage of this battery, it is crucially important that you read and understand the instructions given in this manual.

WARNING!

Failure to properly use, charge and store this battery will void the warranty, and may cause a hazardous situation. DO NOT use this battery with any other vehicle or appliance. Use of this battery with any other product will void the warranty, and may create a hazardous condition that could cause a fire resulting in severe injury or death, and property damage.

If you have any questions about this battery or its usage, please do not hesitate to contact the OSET Customer Service Department.

WARNING!

Never short circuit the discharge terminals of the battery. A short circuit will damage the battery and could cause a fire resulting in severe injury or death, and property damage.

CAUTION!

Keep the battery away from excessive heat and/or open flames. Avoid long term exposure to direct rays from the sun.

CAUTION!

Protect the batteries from water or other moisture. If the batteries become wet from rain during use, dry as soon as possible. Remove the batteries from the bike before washing.

CAUTION!


To avoid damage to the battery, never subject it to intense physical shock or severe vibration.

FRONT BRAKE ADJUSTMENT – OSET 12.5:

- Using an allen wrench, adjust the vertical height and rotation of each brake pad so each pad is level and square on the rim.
- Re-tighten each pad once it is in the correct position. *(Make certain that the pads are centered on the rim and do not rub on the tire or fall below the rim.)*
- Using an allen wrench, loosen the cable fixing bolt.
- Check to make certain that the cable noodle (curved pipe) is properly seated in the RH brake arm link.
- Check to make certain that the black rubber boot is not binding the brake link wire.
- By pulling on the loose end of the brake link wire, tighten the brake arms until each brake pad is 2 mm from the rim.
- Retighten the brake link wire fixing bolt with the 5 mm Allen wrench. Test that the cable will not slip, by pulling hard on the lever a number of times.

FRONT BRAKE ADJUSTMENT – OSET 16.0:

- Using an allen wrench, loosen the brake cable fixing bolt.
- With the wheel raised, manually pull up the brake caliper arm until there is resistance when you try to spin the wheel.
- Re-tighten the cable fixing bolt. Test that the cable will not slip, by pulling hard on the lever a number of times.
- Fine adjustments can be made at the handlebar lever.
- If the wheel does not spin freely with the brake released, the caliper position itself can be moved by using an allen on the back side of the caliper.

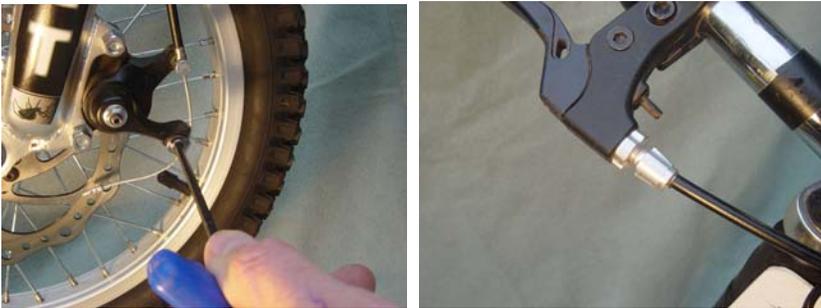

WARNING!

OSET brakes are adjustable. Beginning riders should have the front brake 'backed off' somewhat so it does not bite too suddenly. As the rider gets better, the brake can be tightened up for a quicker action.

REAR BRAKE ADJUSTMENT AND OPERATION:

All brakes need periodic adjustment. Band brakes should only be adjusted by a qualified service technician. If and when your brake shows any decline in efficiency or needs adjustment, it is very strongly recommends you take your bike to your local retailer for maintenance. Improper adjustment of your brake can cause poor braking and could lead to an accident and very serious injury.

UNPACKING AND ASSEMBLY:

WARNING!

Failure to properly assemble and adjust your bike prior to use may result in an accident resulting in death, serious injury and/or property damage. If you are uncertain about any aspect of the assembly and adjustment of your bike, seek help from a qualified mechanic or the OSET Customer Service Department.

WARNING!

There are no user serviceable elements incorporated into the motor, motor controller, batteries, battery charger, throttle, or wiring harness of your OSET electric bike. **DO NOT ATTEMPT TO DISASSEMBLE OR ADJUST ANY OF THESE COMPONENTS.** Doing so may cause extensive damage to these components, will void your warranty, and may cause a hazardous condition. If you cannot resolve a problem using this owners manual, contact your OSET authorized dealer, or call the OSET Customer Service Department for assistance.

NOTE!

If you purchased your OSET at a local retailer your machine may be fully adjusted and ready to ride. If you purchased your OSET in the carton, please carefully follow the instructions below and any supplemental instructions to finish the assembly and adjustment of your OSET.

- 1 Remove your **OSET** from the box.
- 2 Lower kickstand and place your OSET on a solid & level surface.
- 3 Remove all the packing materials.
- 4 Using the supplied allen wrench, make sure the steering stem is in the forward facing position and tighten the top and side bolts securely and evenly. Secure the handlebars tightly in the steering stem. Double check tightness and alignment. Adjust the brake lever positions to suit the rider.
- 5 Check tire pressure of both tires and confirm they are properly inflated to 30-40 psi.
- 6 Unpack charger from its box and charge the batteries while thoroughly reading the complete owners manual. (See the Charging Instructions on pages 23).
- 7 Compress each brake lever in turn. The lever should not compress completely to the bar Each individual brake should hold the bike securely when you push the OSET against the brake. If your brake needs adjustment, follow the instructions on page 20. For beginning riders adjust the front brake so it will not lock the wheel easily. Learning riders should be aware which lever operates which brake.
8. For maximum battery life, always fully charge before operating your OSET for the first time. (See page 23 for charging instructions).
9. While your batteries are charging, *please Read Your Owners Manual completely.*

Now your OSET is fully assembled, adjusted and checked. Once the batteries are fully charged, your OSET will be ready to ride safely.

SWITCH PLATE:

The 'switch plate' is under the seat area and is the location for several important items, as follows:

Key Switch:

The key switch turns the power on and off. When the rider is sitting on the bike, this is located underneath them on the right side of the bike. This location encourages the rider to turn the key with their right hand. The key is removable, and should be removed when the bike is not in use.


Potentiometer:

The 'speed dial' potentiometer allows the responsible adult to set the speed anywhere from 0 mph to maximum. The position of the speed dial is deliberately awkward to get to, and should only be altered by a responsible adult. A screwdriver can be used for any changes. It is important that all people are away from the bike during this operation. When changing the settings make sure the side-stand is down. After making a change, push the bike against the side-stand to raise the rear wheel. With the power on, turn the twist-grip throttle fully open to check the top speed. Bear in mind that the dial is not completely linear. Do not guess the settings. Always check before allowing the rider back on the bike.

Charger Port:

When it's time to recharge the bike, the battery charger connector attaches to this port. Before attaching, ensure that the power is switched to the off position. Please refer to the battery and charging section (page 23) of this manual for more information.


Please Note: All pictures are of pre-production prototypes, so could differ from the final production machines.

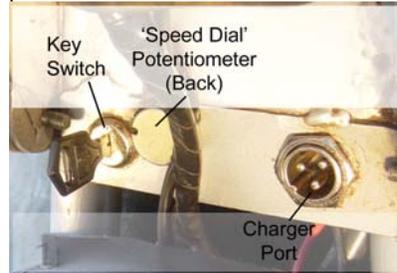

REAR WHEEL REMOVAL AND INSTALLATION:

1. Ensure power is switched off.
2. Lift the bike onto a block or stand so the wheels are off the ground.
3. Remove the chain-guard by removing the 4 bolts securing it.
4. Release the band brake cable by undoing the cable pinch bolt (a).
5. Remove the band brake securing bolt.
6. Loosen the axle bolts.
7. Loosen the chain adjustment nuts to the point where the wheel can be pushed forward, and the chain slipped off to the right of the sprockets.
8. Pull back on the wheel to remove it.

To re-install the wheel reverse the above procedures. Ensure the chain is correctly adjusted, the wheel is aligned, and all nuts and bolts are tight. When everything else is tight, re-attach the rear band brake cable pinch bolt such that the brake is adjusted correctly. Minor adjustments can be made at the brake lever.

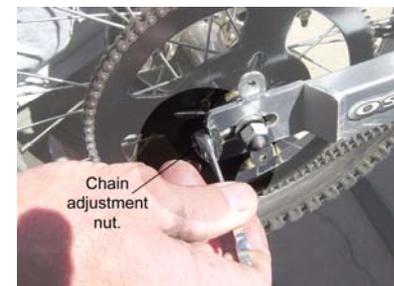

- Check the tires for proper inflation. Also, inspect the tires for damage.

CLEANING:

Cleaning and maintaining your OSET correctly will provide a more enjoyable ownership and riding experience. By hand cleaning the bike, you can simultaneously inspect all of the components. We recommend cleaning be done with a damp cloth. **Never use a hose and never pour water onto the bike. A hose or power washer may cause irreparable damage to sensitive components.**

WARNING!

Water and electrical components do not mix! Do not get water onto the controller, throttle or wiring. Failure to follow this instruction could result in permanent damage, and could cause erratic machine behavior, leading to possible injury or death.

FRONT WHEEL REMOVAL AND INSTALLATION:

- Ensure power is switched off.
- Lift the bike onto a block or stand so the wheels are off the ground.
- On OSET 12.5, disconnect the V-Brake cable by squeezing the two sides together and release the cable end from the mount.
- Loosen the axle bolts and lower the wheel away from the front forks.
- To re-install the wheel, reverse the above procedure and ensure the wheel is aligned correctly and the axle bolts are tight. Spin the wheel to ensure it is centered and spins freely.



WARNING!

If power is turned on while the throttle is open, the bike will accelerate immediately. This is potentially very dangerous. The rider's right hand should be used to switch the power on, with no hands on the throttle.

WARNING!

It is very important to keep everyone clear of the bike when changing and checking the speed setting. The dial is very sensitive to small adjustments. Do not guess at changes. Always check before the rider gets back on.

WARNING!

The power must be switched to the off position before attaching and plugging in the charger.

CHARGE INDICATOR:




The battery charge indicator is located on the throttle assembly and shows the state of the batteries. The indicator lights can be checked at any time to determine if the main power is off or on. Always turn the power off and remove the key when the bike is not in use.



DRIVE TRAIN:

Your OSET features a traditional chain and sprockets, covered by a plastic chain-guard. It is direct drive, with no gears. With the motor mounted in the swingarm, suspension movement has no effect on tension. However, the chain does need to be checked and adjusted regularly, especially when the bike is new. The chain must be checked before every ride and adjusted as necessary. There should be very little slack in the chain. Adjustment is done as follows:

1. Ensure power is turned off.
2. Detach chain guard by removing 4 bolts (a).
3. Loosen axle nuts (b) and band brake mount bolt (c).
4. Turn adjustment nuts evenly on both sides. Very small movements can make a big difference. Do not tighten so much there is no slack at all. It should be 'taught', not 'tight'.
5. While the chain guard is off, lubricate the chain & check the sprocket bolts for tightness.
6. Reverse the above procedure, ensuring all bolts are tight.
7. Check the wheel for alignment, and the chain for tension.

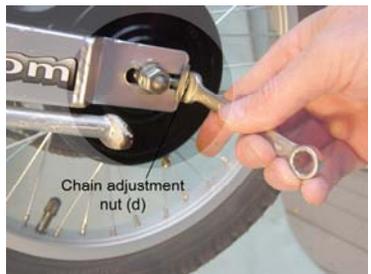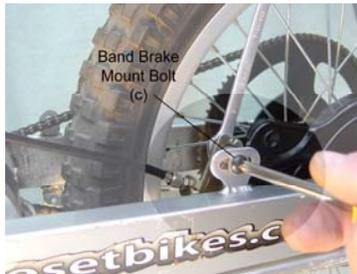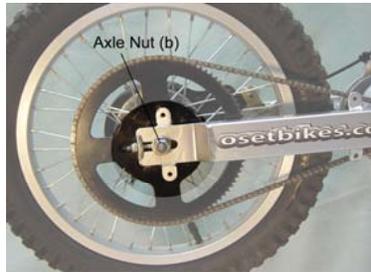

WARNING!

Failure to maintain and adjust the chain and align the wheel correctly could result in the chain jumping off the sprockets, causing a potentially dangerous and damaging condition.

MOTOR PERFORMANCE:

The motor has a thermal sensor which measures the motor's internal temperature and will shut the motor down before overheating causes any irreparable damage. It will reset itself in approximately 15 to 30 minutes.

Motor thermal shutdown can occur when riding in situations that stress the motor, such as long up-hills or continuous full throttle operation when there is no rest period for the motor.

SUSPENSION:


OSET's feature both front and rear suspension.

Front Suspension:

The front suspension is of the telescopic variety, and is non-adjustable.

Rear Suspension:

Your OSET is equipped with a single coil spring type rear shock. For a harder/stiffer ride at the rear tighten the adjustment ring in a clockwise direction. For a softer ride, loosen the adjuster by turning anti-clockwise.

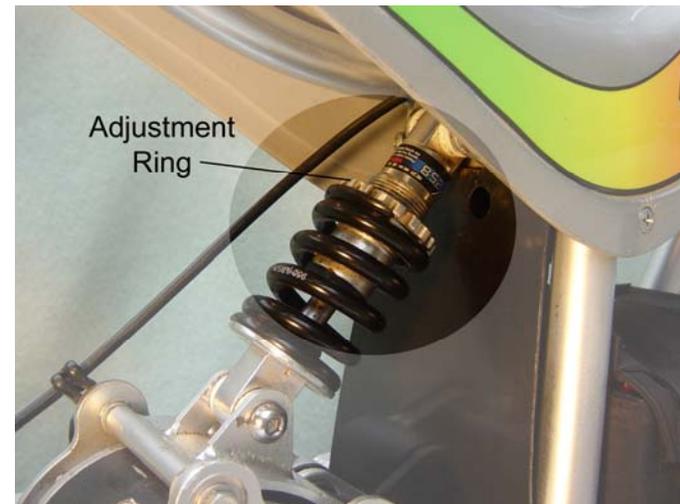

DAILY MAINTENANCE AND CLEANING:

- Keep your OSET clean and dry. Clean using the recommended procedure.
- Check all components for tightness and adjustment, including handlebars, levers, axles, chain, brakes.
- Check the speed dial potentiometer setting.